



Suggested Grip2 – Cord between index & middle finger – Cigarette Hold



Suggested Grip3 – Cord held by all fingers – Full Hand Hold

#### **Maintenance:**

Should your e-pick become dirty it is suggested to clean it with isopropyl alcohol.

Should the silicon sealant on your e-pick wear down, it is suggested to use 100% Clear Silicon All-Purpose Adhesive Sealant to repair it. Let it cure for at least one day before using your e-pick.

## Who We Are

### **About Us**

We are a small electrical engineering business. I am also an amateur guitarist who wanted certain guitar accessories that I couldn't find in the market. So, I developed some of my own.

Should you need a similar custom e-pick for your specific application, please E-Mail me at [technology@rudley.com](mailto:technology@rudley.com). I would provide you a quote. It generally would take me about 1-month to build your custom e-pick.

### **Contact Us**

Email: [technology@rudley.com](mailto:technology@rudley.com)

Web: <http://www.rudley.com>

### **Warranty**

"The e-pick" does not have a warranty. Being a pick, it is rather delicate and can easily break under hard usage. However, if taken good care of it can provide many years of usage. However, when your e-pick is new, and you don't like it, you can return it, and I will return your cost that you paid me.

Please e-mail me at [technology@rudley.com](mailto:technology@rudley.com) to let me know.

Ship the unit to:

Frank Rudley

500 4<sup>TH</sup> Ave.

Lester, PA 19029

**RUDLEY TECHNOLOGY  
SOLUTIONS LLC**

500 4<sup>TH</sup> AVE

Lester, PA 19029




**RUDLEY  
TECHNOLOGY  
SOLUTIONS LLC**

*THE "e-pick" (Electric Guitar Pick)  
P/N EP100-001  
USERS MANUAL*

## THE “e-pick”

Congratulations for purchasing “THE e-pick”.

The Rudley “e-pick” is an electric amplifiable guitar pick. This pick can be connected to any standard ¼” mono jack guitar amplifier to provide an independently amplified guitar pick sound that is separate from your guitar sound.

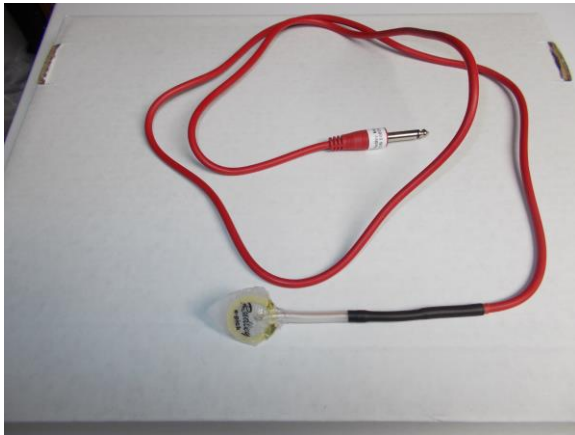

### Features:

- 1) Used to independently amplify the sound of the pick separate from the guitar sound.
- 2) Can be used in recordings to record the pick sound separate from the guitar sound.
- 3) Can be used to capture the guitar rhythm in automated rhythm capture recording programs. Drums can be substituted for the e-pick sound. Thereby, providing a way to capture rhythms to match your guitar strumming.

- 4) Can be used to trigger events for pedal guitar effects.
- 5) Can be used as a stand-alone musical instrument to capture rhythms.
- 6) Guitar pedal effects can be applied to the e-pick to get various sounds.
- 7) No battery power required.



P/N EP100-001 – Front View



P/N EP100-001 – Back View



P/N EP100-001 – ¼ inch plug



Suggested Grip1 – Bend Cord Between Thumb & Index Finger – Light Hold